

Valve Clearance

Refer to *Safety Precautions* on page 25.


Excessive valve clearance will cause noise and eventual engine damage. Little or no clearance will prevent the valve from closing and cause valve damage and power loss. Check the valve clearance when the engine is cold at the intervals specified in the Maintenance Schedule (pages 27, 28).

The checking or adjusting of the valve clearance should be performed while the engine is cold. The valve clearance will change as engine temperature rises.

Cylinder Head Cover Removal

Before inspection, clean the engine thoroughly to keep dirt from entering the engine.

1. Remove the seat (page 36).
2. Remove the fuel tank (page 37).
3. Disconnect the breather tube (1) and direct ignition coil (2).

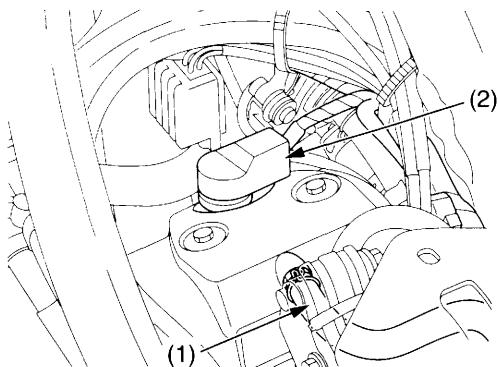

(1) breather tube (2) direct ignition coil


4. Remove the cylinder head cover bolts/rubber seals (3), and cylinder head cover (4).



(3) cylinder head cover bolts/rubber seals
(4) cylinder head cover

Positioning At Top Dead Center On The Compression Stroke

1. Remove the crankshaft hole cap (1).

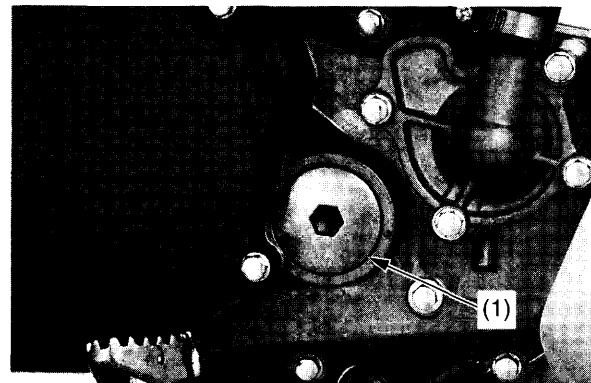

(1) crankshaft hole cap