

Storing Your Honda

Removal from Storage

1. Uncover and clean your CRF.
Change the engine and transmission oil if more than 4 months have passed since the start of storage.
2. Uncover the end of the muffler and remove the rag from the muffler outlet.
3. Fill the fuel tank with recommended fuel (page 41).
4. Charge the battery (page 100) as required.
Install the battery.
5. Pour a fresh recommended coolant mixture (page 48) slowly into the radiator filler hole up to the filler neck.
Capacity:
1.27 US qt (1.20 ℓ)
after disassembly
1.19 US qt (1.13 ℓ)
after draining

Remove the radiator reserve tank cap and fill the reserve tank to the upper level line.
Bleed air from the system.
6. Perform all maintenance checks (page 11).