

Index

A

- accessories4
- adjustments,
 - chassis 135
 - control freeplay54,56,60,86
 - for competition 105
 - gearing 136
 - high altitude carburetor 157
 - idle speed 134
 - personal fit 138
 - suspension, front 106
 - suspension, rear 120
 - suspension, track conditions 124
 - tire selection 92
- after competition maintenance 33
- air cleaner 51
- air pressure,
 - front suspension 106
 - tires 91
- apparel, protective 2
- appearance care 102
- authorized manuals 168

B

- basic operation 13
- battery 99
- before riding 9
- between motos & practice maintenance 33
- brakes,
 - fluid level 87
 - lever, front adjustment 86
 - pad wear 89
 - pedal height 86
- break-in guidelines 21

C

- capacity, fuel 41
- carburetor,
 - assembly 133
 - circuit functions 128
 - components 128
 - disassembly 131
 - high altitude adjustment 157
 - idle speed 134
 - removal 130
- care, appearance 102
- chain drive 94
- chassis adjustments 135
- choke knob 15
- cleaner, air 51
- cleaning, appearance care 102
- clutch system, adjustment 56
- consumer information 167
- competition logbook 161
- contacting Honda 171
- controls, operating 7
- coolant 48
- cylinder removal 76

D

- damping adjustments,
 - front 106
 - rear 121
- dealer, your Honda 172
- diagram, wiring 165
- drive chain 94

E

- engine,
 - flooded 16
 - idle speed 134
 - number 150
 - pinging 41
 - starting 15
 - stop button 16
 - stopping 16
 - won't start 144
- exhaust pipe,
 - removal 64
 - installation 64
 - environment, protecting 143

F

- filter,
 - air 51
 - oil 44
- flooded engine, starting 16
- fork,
 - front suspension adjustment 106
 - front suspension inspection 82
 - oil recommendation 84
- front brake lever adjustment 86
- front suspension disassembly 107
- fuel,
 - line 41
 - filter 42
 - recommendation 41
 - refueling 41
 - system 41
 - oxygenated 160
 - tank capacity 41
 - tank removal 37
 - valve 15