

Maintenance Schedule

MAINTENANCE SCHEDULE – COMPETITION USE

All items should be checked before each competition event. See your Honda dealer unless you are mechanically qualified and have the proper tools.

Damage from competition use is not covered by the Distributor's Limited Warranty on your Honda.

Perform the Pre-ride Inspection (page 11) at each scheduled maintenance period.

I: Inspect and Clean, Adjust, Lubricate or Replace if necessary. C: Clean. A: Adjust. L: Lubricate. R: Replace.

ITEMS	FREQUENCY	NOTE	About	About	About	About	About	Ref. Page
			2.5 hours	7.5 hours	15.0 hours	22.5 hours	30.0 hours	
THROTTLE OPERATION			I					55
HOT STARTER			I					60
AIR FILTER		(NOTE 1)	C					51
CRANKCASE BREATHER			I					53
SPARK PLUG			I					61
RADIATOR COOLANT		(NOTE 2)	I					48
VALVE CLEARANCE / DECOMPRESSOR SYSTEM		(NOTE 4)			I			66
ENGINE OIL		(NOTE 3)	I		R			43
ENGINE OIL FILTER		(NOTE 3)			R			44
ENGINE IDLE SPEED			I					140
PISTON AND PISTON RINGS					R			79
PISTON PIN						R		79
TRANSMISSION OIL		(NOTE 5)	I		R			46
COOLING SYSTEM			I					49
DRIVE CHAIN			I, L	R				96
DRIVE CHAIN SLIDER			I					98
DRIVE CHAIN ROLLER			I					98
DRIVE SPROCKET			I					97
DRIVEN SPROCKET			I					97
BRAKE FLUID		(NOTE 2)	I					89
BRAKE PADS WEAR			I					91
BRAKE SYSTEM			I					88
CLUTCH SYSTEM		(NOTE 5)	I					56
CONTROL CABLES			I, L					102
EXHAUST PIPE/MUFFLER			I					62
SUSPENSION			I					84, 85
SWINGARM/SHOCK LINKAGE				L				32
FORK OIL	FORK TUBE/SLIDER	(NOTE 3)		R				86
	DAMPER					R		117
NUTS, BOLTS, FASTENERS			I					103, 160 – 163
WHEELS/TIRES			I					92, 93
STEERING HEAD BEARINGS						I		102

* We recommended these items be serviced by referring to the Honda service manual.

This maintenance schedule is based upon average riding condition. Machine subjected to severe use require more frequent servicing.

- NOTE:
- 1.Clean after every heat for dusty riding conditions.
 - 2.Replace every 2 years. Replacement requires mechanical skill.
 - 3.Replace after the first break-in ride.
 - 4.Inspect after the first break-in ride.
 - 5.Replace the transmission oil, if the clutch discs and plates are replaced.