


6. Install the spark plug (page 61)
7. Connect the spark plug cap (9) and breather tube (10).

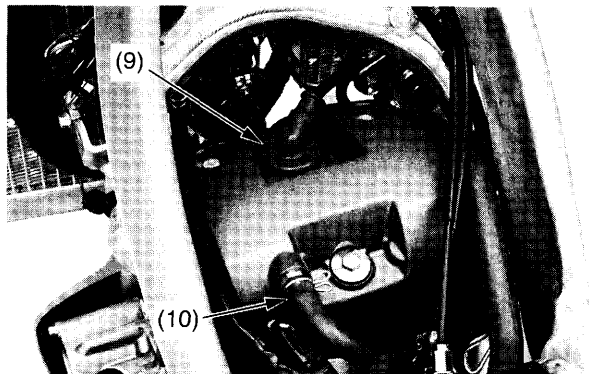

- (9) spark plug cap
(10) breather tube

8. Install the fuel tank and seat (pages 36, 38).