


Freeplay Adjustment:

1. Adjust freeplay with the throttle cable adjuster (1). Measured in grip rotation, the standard throttle grip freeplay is:
2.0 – 4.0 mm (0.08 – 0.16 in)
2. To adjust the freeplay, loosen the lock nut (2) and turn the adjuster.
3. After adjustment, check again for smooth rotation of the throttle grip from the fully closed to the fully open position with the steering to the full right and left as well as straight ahead.

If proper throttle freeplay cannot be achieved, contact your Honda dealer.

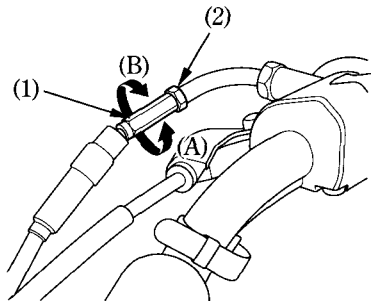

- (1) Throttle cable adjuster
- (2) Lock nut

- (A) Decrease freeplay
- (B) Increase freeplay