

Maintenance Schedule

Items	Frequency	Whichever Comes First ⇒	Initial Maint.	Regular Maint. Interval				Refer to page:		
				mi	100	600	1,200		1,800	2,400
				km	150	1,000	2,000		3,000	4,000
				Note	Month	1	6		12	18
	Drive Chain	Note 1	I, L	I, L: every 300 mi (500 km) or 3 month				97		
	Drive Chain Slider			I	I	I	I	98		
	Brake Shoe Wear			I	I	I	I	85		
	Brake System		I	I	I	I	I	82		
	Clutch System		I	I	I	I	I	69		
	Side Stand				I		I	96		
	* Suspension				I		I	79		
	* Spark Arrester			C: every 1,000 mi (1,600 km) or every 100 operating hours				77		
	* Nuts, Bolts, Fasteners		I		I		I	—		
	** Wheels/Tires		I	I	I	I	I	87, 92		
	** Steering Head Bearings		I		I		I	—		

- * Should be serviced by your Honda dealer, unless the owner has the proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 142).
- ** In the interest of safety, we recommend these items be serviced only by your Honda dealer.