

## AIR CLEANER



Refer to the Safety Precautions on page 50 .

The air cleaner should be serviced at regular intervals (page 52 ). Service more frequently when riding in unusually wet or dusty areas.

1. Remove the wing nut (1), washer and air cleaner tube clamp screw (2), then remove the air cleaner tube and air cleaner housing cover.
2. Unscrew the mounting plate bolt (3) and remove the mounting plate (4).
3. Pull out the air cleaner (5).
4. Wash the air cleaner in clean, nonflammable or high flash point solvent and let it dry thoroughly.

Never use petrol or low flash point solvents for cleaning the air cleaner. A fire or explosion could result.

5. Soak the air cleaner in gear oil (SAE 80—90) until saturated, then squeeze out the excess oil.
6. Install the removed parts in the reverse order of removal.

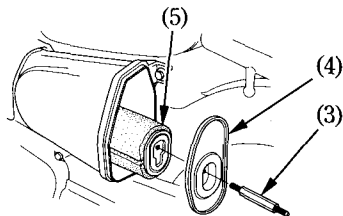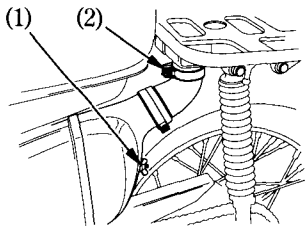

- (1) Wing nut
- (2) Screw
- (3) Bolt
- (4) Mounting plate
- (5) Air cleaner