


The battery (5) is in the battery box behind the left side cover.


Removal:

1. Make sure the ignition switch is OFF.
2. Remove the right side cover (page 37).
3. Remove the battery case cover bolt (1).
4. Unhook the positive(+) terminal lead from the hook (2).
5. Press on the locking tabs (3) and open the battery case cover (4).
6. Disconnect the negative (-) terminal lead (6) from the battery first, then disconnect the positive (+) terminal lead (7).
7. Pull out the battery from the battery box.
8. Remove the battery (5).

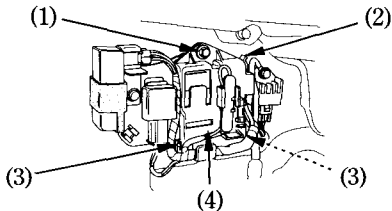

Installation:

1. Reinstall in the reverse order of removal. Be sure to connect the positive (+) terminal first, then the negative (-) terminal.
2. Check all bolts and other fasteners are secure.

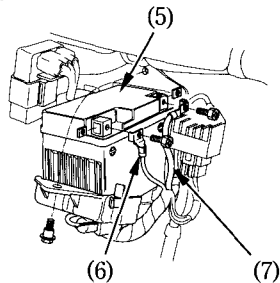

- (1) Battery case cover bolt
- (2) Hook
- (3) Locking tabs
- (4) Battery case cover
- (5) Battery
- (6) Negative (-) terminal lead
- (7) Positive (+) terminal lead