

4. Wash the element in non-flammable or high flash point solvent and let it dry thoroughly.

**▲ WARNING**

- \* **Never use petrol or low flash point solvents for cleaning the air cleaner element. A fire or explosion could result.**
5. Soak the element in gear oil (SAE 80—90) and squeeze out the excess.
  6. Install the removed parts in the reverse order of disassembly.