


● AIR CLEANER SERVICE

A clogged air filter will adversely affect engine performance, therefore it should be cleaned periodically as follows.

1. Unscrew the air cleaner cover setting screw and remove the air cleaner cover ①.
2. Remove the air cleaner element ②.
3. Wash the air cleaner element with gasoline and dry it thoroughly.
4. Soak the air cleaner element in a mixture of 10 part gasoline to 1 part of engine oil, curing out by hand and then reinstall into the air cleaner case.

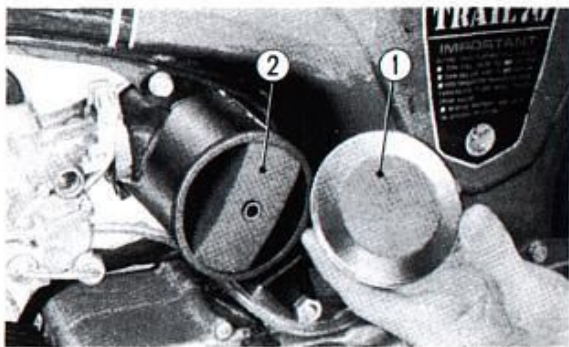

- ① Air cleaner cover
② Air cleaner element