


● FRONT AND REAR BRAKE ADJUSTMENT

Brakes are items of personal safety and should always be maintained in proper adjustment.


1. Front brake

- Raise the front wheel off the ground by placing a support block under the engine, spin the front wheel by hand and measure the amount. The front brake lever ① must be moved before the brake starts to take hold. The lever free play ② should be **0.4~0.8 in (10~20 mm)** at the end of the brake lever.
- When brake adjustment becomes necessary, perform the task with the front brake adjusting nut ③.
Turning the nut in the clockwise direction will decrease the play of the lever and turning the nut counter clockwise will increase the play.

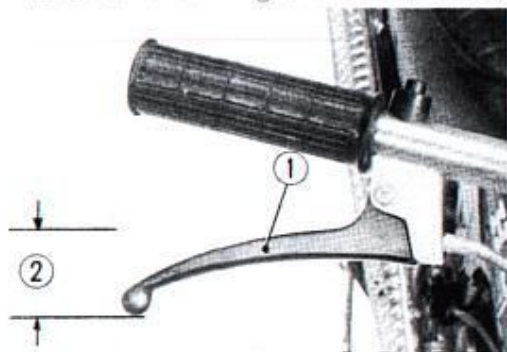

① Front brake lever

② Free play

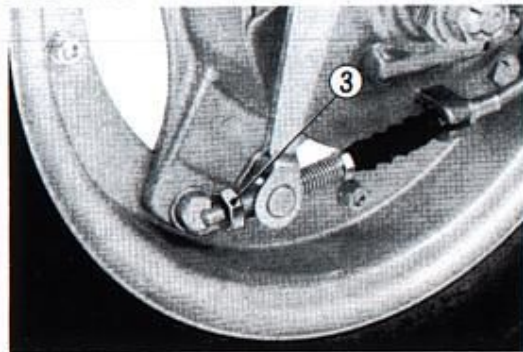

③ Front brake adjusting nut