



2. Rear brake

For the rear brake system, the rear brake lever and the rear brake pedal require adjustment.

1. Place a support block under the motorcycle, raise the rear wheel, and then, tread on the rear brake pedal while lightly rotating the rear wheel. Check the pedal free play (2) until the rear brake starts to take hold. The standard pedal free travel is **0.8–1.2 in. (20–30 mm)**.
2. The adjustment is made with the rear brake adjusting nut (3). The pedal free play decrease by turning the adjusting nut clockwise, while it increases by turning the adjusting nut counterclockwise.

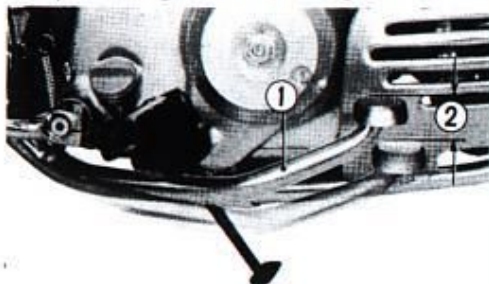

- ① Rear brake pedal
- ② Free play

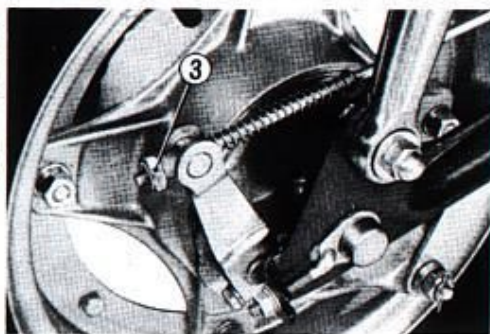

- ③ Rear brake adjusting nut