

Status Icons

The information about currently used audio system and handle grip heater system is displayed on the upper part of i-multi-information display by icons.

▶ Information of the audio system: P.44



▶ Information of the handle grip heater system: P.42



To reset the tripmeter and average fuel mileage

To reset the tripmeter A and average fuel mileage, press and hold the **SET** button to reset to 0.0 km (mile) with the tripmeter A displayed. At the same time the average fuel mileage is reset.

To reset the tripmeter B, press and hold the **SET** button to reset to 0.0 km (mile) with the tripmeter B displayed.