

## To change the speed and mileage unit

### E type only

- 1 Select "DIST" on the menu screen of "UNIT", and then the cursor moves to "mile" or "km".
- 2 Press the **SELECT** button to select either "mile" or "km".
- 3 Press the **SET** button. The cursor returns to "DIST".



When selecting "mile"

- Unit of the average speed shows "mph"
- Unit of the odometer, tripmeter A/B and available driving distance shows "mile"
- Unit of the current fuel mileage and average fuel mileage shows "mile/gal"
- Unit of the amount of remaining fuel shows "gal"

When selecting "km"

- Unit of the average speed shows "km/h"
- Unit of the odometer, tripmeter A/B and available driving distance shows "km"
- Unit of the current fuel mileage and average fuel mileage shows "l/100km"
- Unit of the amount of remaining fuel shows "L"