

Instruments *(Continued)*

To change the fuel mileage meter unit


1 Select "FUEL" on the menu screen of "UNIT", and then the cursor moves to "l/100km", "km/l", "mile/gal" or "mile/l".

2 ED, U and E type that selected "km" in "DIST"

Press the **SELECT** button to select either "l/100km" or "km/l".

E type that selected "mile" in "DIST"

Press the **SELECT** button to select either "mile/gal" or "mile/l".

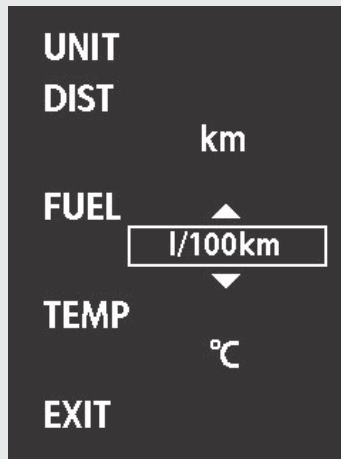

3 Press the **SET** button. The cursor returns to "FUEL".

When selecting "l/100km"

- Unit of current fuel mileage and average fuel mileage shows "l/100km"
- Unit of amount of remaining fuel shows "L"

When selecting "km/l"

- Unit of current fuel mileage and average fuel mileage shows "km/l"
- Unit of amount of remaining fuel shows "L"

When selecting "mile/gal"

- Unit of current fuel mileage and average fuel mileage shows "mile/gal"
- Unit of amount of remaining fuel shows "gal"

When selecting "mile/l"

- Unit of current fuel mileage and average fuel mileage shows "mile/l"
- Unit of amount of remaining fuel shows "L"