

➡ **Right turn signal indicator**

⬅ **Left turn signal indicator**

 **Low fuel indicator**

- Comes on briefly when the ignition switch is turned on.
- Comes on when there is only reserve fuel left in the fuel tank. Remaining fuel when low fuel indicator comes on: 3.4 litres (0.9 US gal, 0.7 Imp gal)

Low fuel indicator comes on and the 1st (E) segment of the fuel gauge flashes: ➡ P. 26

 **TCS (Traction Control System) indicator**


- Comes on when the ignition switch is turned on. Goes off when your speed reaches approximately 10 km/h (6 mph) to indicate TCS is ready to work.
- Blinks when TCS is operating.

If it comes on while riding: ➡ P. 119

 **TCS (Traction Control System) OFF indicator**

Comes on when the TCS is turned off.

HISS indicator ➡ P. 28 ➡ P. 30 ➡ P. 146

- Comes on briefly when the ignition switch is turned on with the engine stop switch in the  (Run) position. Goes off if the ignition key has the correct coding.
- Flashes every 2 seconds for 24 hours when the ignition switch is turned off.