


Left Side Cover

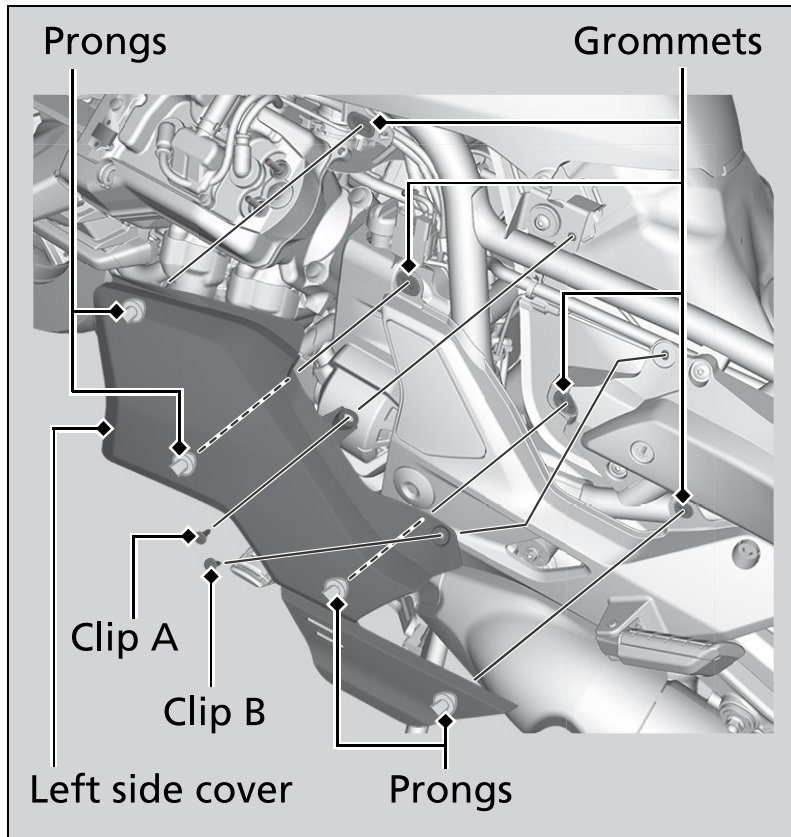

The left side cover must be removed to access the coolant reserve tank cap.

Removal

1. Remove the seat. ► P. 86
2. Remove the left over head cover. ► P. 88
3. Remove the clip A. ► P. 94
4. Remove the clip B. ► P. 94
5. Remove the left side cover by releasing the prongs from the grommets.

Installation

Install the parts in the reverse order of removal.