

Symptom	Cause/remedy
About USB device	Some USB devices may be incompatible with the audio system and/or their operable functions may be limited.
	When the audio system does not recognize the USB device connected to the USB connector, turn the ignition switch off and then turn it on again.
	When a large number of files are stored in the USB flash drive, it sometimes takes a long time before starting to play an audio file. Reduce the number of files in the USB flash drive.
	Check that the audio file stored in the USB flash drive is in a playable file format. ➡ P. 47

If the problem continues after the above-described inspection, have your motorcycle inspected by your dealer.