


Removing & Installing Body Components

Seat

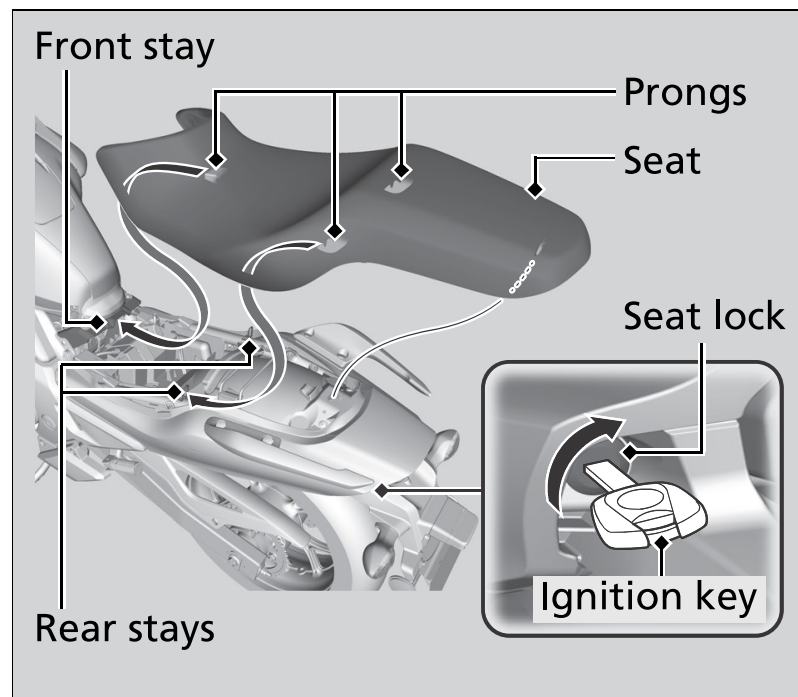

Removal

1. Insert the ignition key into the seat lock, and turn it clockwise.
2. Pull the seat back and up.

Installation

1. Insert the front and rear prongs into the front and rear stays on the frame.
2. Push forward and down on the rear of the seat until it locks in place. Make sure that the seat is locked securely in position by pulling it up lightly.

The seat locks automatically when closed. Take care not to lock your key in the under seat compartment.