


Right Under Cowl Lid

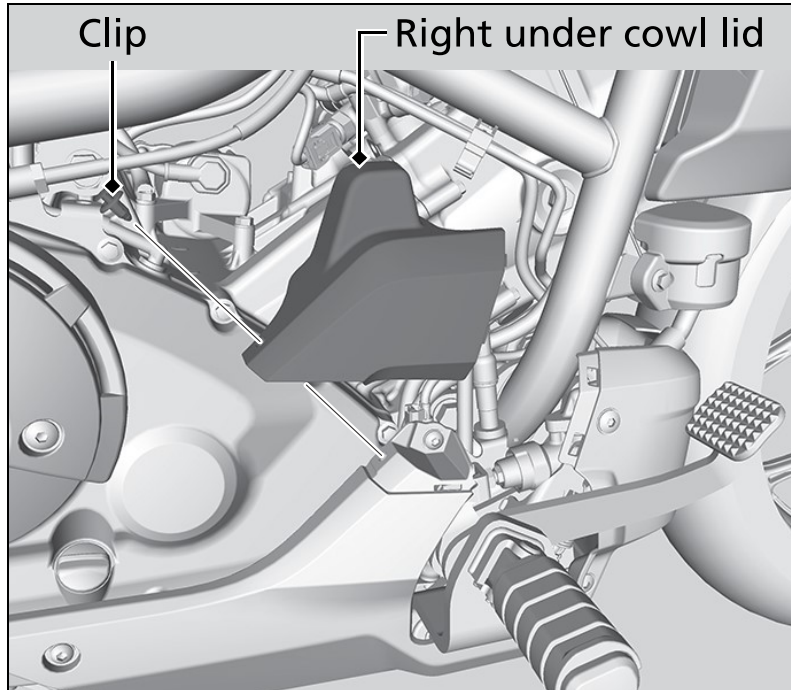

The right under cowl lid must be removed to service the coolant reserve tank and brake light switch.

■ Removal

1. Remove the clip. ► P. 68
2. Remove the right under cowl lid.

■ Installation

Install the parts in the reverse order of removal.