



7. Apply a thin coat of engine oil to the rubber seal of a new oil filter.

8. Install a new oil filter and tighten.

Torque: 26 N·m (2.7 kgf·m, 19 lbf·ft).

9. Install a new sealing washer onto the drain bolt. Tighten the drain bolt.

Torque: 30 N·m (3.1 kgf·m, 22 lbf·ft).

10. Fill the crankcase with the recommended oil (► P. 56) and install the oil fill cap/ dipstick.

Required oil

CTX700A

When changing oil & engine oil filter:

3.4 litres (3.6 US qt, 3.0 Imp qt)

When changing oil only:

3.1 litres (3.3 US qt, 2.7 Imp qt)

CTX700D

When changing oil & engine oil filter:

3.4 litres (3.6 US qt, 3.0 Imp qt)

When changing oil only:

3.2 litres (3.4 US qt, 2.8 Imp qt)

11. Check the oil level. ► P. 70

12. Check that there are no oil leaks.