

4. Install the new clutch oil filter with the rubber seal facing in, toward the engine. You will see "OUT-SIDE" mark on the clutch oil filter body, toward the filter cover.
5. Replace the O-ring and apply a thin coat of engine oil to the new O-ring before installing it.
6. Install the spring and the clutch oil filter cover.
7. Install the clutch oil filter cover bolts and tighten.
8. Apply a thin coat of engine oil to the rubber seal of a new engine oil filter.
 ► P. 73
9. Install a new engine oil filter and tighten.

Torque: 26 N·m (2.7 kgf·m, 19 lbf·ft).

10. Install a new sealing washer onto the drain bolt. Install the drain bolt and tighten.

Torque: 30 N·m (3.1 kgf·m, 22 lbf·ft).

11. Fill the crankcase with the recommended oil (► P. 56) and install the oil fill cap/ dipstick.

Required oil

When changing oil, engine oil filter & clutch oil filter:

3.4 litres (3.6 US qt, 3.0 Imp qt)

12. Check the oil level. ► P. 71
13. Check that there are no oil leaks.
14. Install the right under cowl.