

10. Tighten the drive chain adjusting nuts lightly, then hold the adjusting nuts and tighten the lock nuts.

**Torque:** 21 N·m (2.1 kgf·m, 15 lbf·ft).

11. Recheck drive chain slack.

If a torque wrench was not used for installation, see your dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capacity.

## Checking the Drive Chain Wear

Check the chain wear label when adjusting the drive chain. If the arrow mark on the chain adjuster plate enters the red zone on the label after the chain has been adjusted to the proper slack, the chain is excessively worn and must be replaced.

**Chain:** DID 520V0 or RK 520KHO

If necessary, have the drive chain replaced by your dealer.

