

MAINTENANCE SCHEDULE

Perform the Pre-ride Inspection (Page 98) at each scheduled maintenance period.

I: Inspect and Clean, Adjust, Lubricate or Replace, if necessary.

C: Clean. R: Replace. A: Adjust. L: Lubricate

ITEM	FREQUENCY	WHICHEVER COMES FIRST ↓ EVERY	ODOMETRO (NOTE 3)								REFER TO
			1,000km (600mil)	6,400km (4,000mil)	12,800km (8,000mil)	19,200km (12,000mil)	25,600km (16,000mil)	32,000km (20,000mil)	38,400km (24,000mil)		
* FUEL LINES			-	-	I	-	I	-	I	—	
* FUEL STRAINER			-	-	-	-	-	-	R	—	
* THROTTLE OPERATION			I	-	I	-	I	-	I	138	
AIR CLEANER		NOTE 1	-	C	C	C	C	C	C	136	
CRANKCASE BREATHER		NOTE 2	-	C	C	C	C	C	C	142	
SPARK PLUGS			-	I: EVERY 3,200km (2,000mil) R: EVERY 6,400km (4,000mil)						128	
* VALVE CLEARANCE			I	I	I	-	I	-	I	132	
ENGINE OIL		YEAR	R	REPLACE EVERY 3,200 km (2,000 mil)						118	
ENGINE OIL FILTER		YEAR	R	R	R	R	R	R	R	118	
* ENGINE IDLE SPEED			I	I	I	I	I	I	I	140	
RADIATOR COOLANT			-	-	I	-	I	-	R**	—	
* RADIATOR CORE			-	-	I	-	I	-	I	170	
* HOSES & CONNECTIONS OF COOLING SYSTEM			I	-	I	-	I	-	I	170	