

FREQUENCY ITEM	WHICHEVER COMES FIRST ↓ EVERY	ODOMETRO (NOTE 3)								REFER TO
		1,000km (600mil)	6,400km (4,000mil)	12,800km (8,000mil)	19,200km (12,000mil)	25,600km (16,000mil)	32,000km (20,000mil)	38,400km (24,000mil)		
DRIVE SHAFT JOINT		-	-	L	-	L	-	L	---	
FINAL DRIVE LUBRICANT		-	-	I	-	I	-	R	124	
BATTERY	MONTH	I	I	I	I	I	I	I	162	
BRAKE FLUID	MONTH: I 2 YEARS: *R	I	I	I	I	I	I	I	146	
BRAKE PAD WEAR			I	I	I	I	I	I	148	
BRAKE SYSTEM		I	-	I	-	I	-	I	146	
* BRAKE LIGHT SWITCH		I	-	I	-	I	-	I	174	
* HEADLIGHT AIM		I	-	I	-	I	-	I	178	
CLUTCH		I	I	I	I	I	I	I	144	
SIDE STAND		-	-	I	-	I	-	I	---	
* SUSPENSION		I	-	I	-	I	-	I	---	
* NUTS, BOLTS, FASTENERS		I	-	I	-	I	-	I	---	
** WHEELS		I	-	I	-	I	-	I	---	
** STEERING HEAD BEARING		I	-	I	-	I	-	I	---	

* Should be serviced by an authorized HONDA dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official HONDA shop manual.

** In the interest of safety, we recommend these items be serviced ONLY by an authorized HONDA dealer.

NOTE:

1. Service more frequently when riding in dusty areas.
2. Service more frequently when riding in rain or at full throttle.
3. For higher odometer readings, repeat at the frequency interval established here.