


Fuel Tank

Fuel tank capacity is 17.0ℓ (4.5 U.S. gal.) including 3.5ℓ (0.9 U.S. gal.) in the reserve supply. To open the filler cap (2), open the filler cover (1) with the ignition key by turning 90° counterclockwise while pushing. Then turn filler cap counterclockwise.

Use low-lead or regular gasoline with a Pump Octane number ($\frac{R+M}{2}$) of 86 or

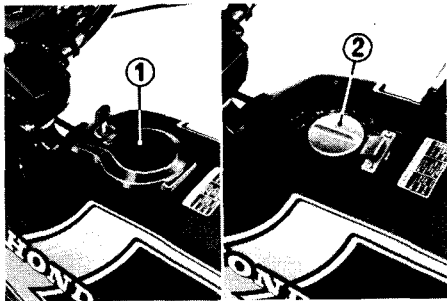

(1) Filler cover

(2) Filler cap

higher or Research Octane number of 91 or higher.

To close the fuel filler cover, insert the key and turn it 90° clockwise while pushing.

WARNING

- * *Gasoline is extremely flammable and is explosive under certain conditions. Refuel in a well ventilated area with engine stopped. Do not smoke or allow open flames or sparks in the area where the motorcycle is refueled or where gasoline is stored.*
- * *Do not overfill the tank (there should be no fuel in the filler neck). After refueling, make sure the filler cap is closed securely.*