

3. Install the axle holders (6) with the arrow (high mating surface) forward and tighten the forward holder nut (5) to the specified torque first, then tighten the rear nut to the same torque.


Axle holder nut torque:

1.8–2.5 kg-m (13.0–18.1 lbs-ft)

Axle nut torque:

5.5–6.5 kg-m (39.8–47.0 lbs-ft)

4. After installing the wheel, apply the brakes several times and check for free wheel rotation.

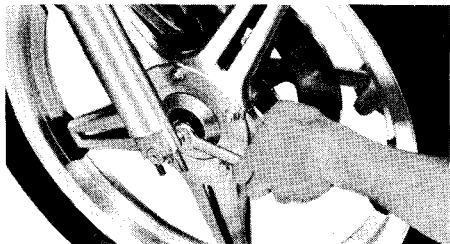


Before installing the axle holder, tighten the axle nut.

CAUTION

- * Always replace used cotter pins with new ones.

WARNING

- * If a torque wrench was not used for installation, see your dealer as soon as possible to verify proper assembly.

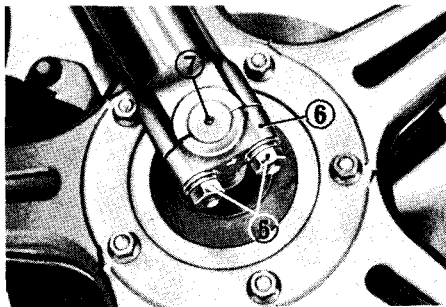

(5) Holder nut
(6) Axle holder

(7) Axle