



Rear Wheel Removal

1. Place the motorcycle on its center stand.
2. Remove the rear brake adjusting nut (1), disconnect the brake rod (2) from the brake arm (3).
3. Disconnect the brake stopper arm (4) from the backing plate by removing the cotter pin (5), stopper arm nut (6), washer and rubber grommet.

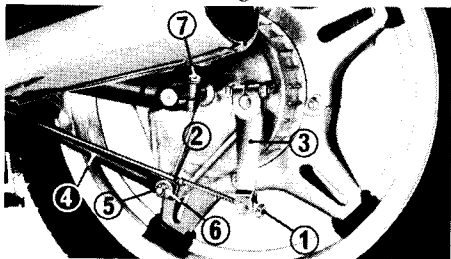

- | | |
|-------------------|-----------------------|
| (1) Adjusting nut | (5) Cotter pin |
| (2) Brake rod | (6) Stopper arm nut |
| (3) Brake arm | (7) Axle holding bolt |
| (4) Stopper arm | |

4. Remove the axle holding bolt (7).
5. Remove the cotter pin (8) from the axle end.
6. Remove the axle nut (9) by holding the axle at flat portion with the open end wrench.
7. Pull the rear axle out.
8. Move the wheel to the left side to separate it from the final drive gear case.
9. Remove the wheel.

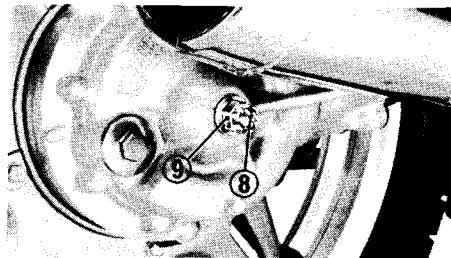

- | |
|----------------|
| (8) Cotter pin |
| (9) Axle nut |