


Fuse Replacement

The main fuse (1), near the battery on the positive lead in the fuse holder, is 20A.

The fuse box (3) is located on the handle-bar holder. The specified fuses are 10A for the headlight and the tail/meter lamps. When frequent fuse failure occurs, it usually indicates a short circuit or an overload in the electrical system. See your authorized Honda dealer for repair.

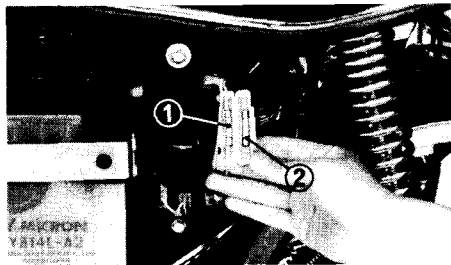


- (1) Main fuse
- (2) Spare fuse

WARNING

* *Never use a fuse with a different rating from that specified. Serious damage to the electrical system or a fire may result.*

CAUTION

* *Turn the ignition switch "OFF" before checking or replacing fuses to prevent accidental short-circuiting.*

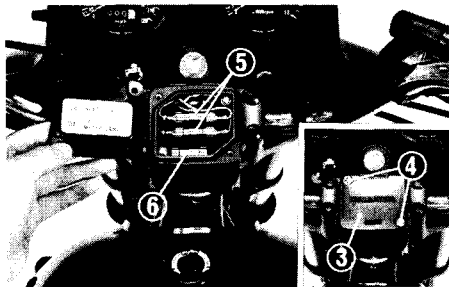

- (3) Fuse box
- (4) Screws
- (5) Fuses
- (6) Spare fuse