

Engine Oil Change


Engine oil quality is the chief factor affecting engine service life. Change the engine oil when specified by the maintenance schedule.

NOTE

- * Engine oil change is performed with engine at normal operating temperature.
- * Fill with engine oil after oil filter element replacement.

1. Place the motorcycle on its center stand.
2. Remove the oil filler cap/dipstick.
3. Remove the drain plug (1) with a 17mm wrench.
4. Remove the oil filter lock bolt (2) and the oil filter case. Drain the oil.
5. Make sure that the sealing washer on the drain plug and the O-rings on the filter lock bolt and the oil filter case are in good condition.

6. After the oil is completely drained, re-install the oil filter case and drain plug.
7. Fill the crankcase with approximately 2.5 liters (2.6 U.S. quarts) of recommended grade oil.
8. Reinstall the oil filler cap.
9. Start the engine and allow to idle for a few minutes.
10. Stop the engine, make sure that the oil level is at the upper level mark and that there are no oil leaks.

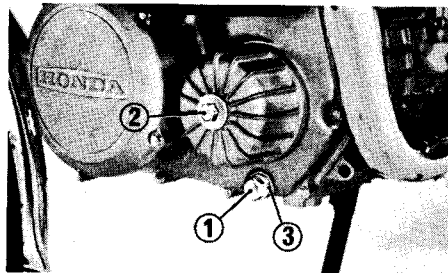

- (1) Oil drain plug (3) Sealing washer
(2) Oil filter lock bolt