

To open the fuel fill cap (2), insert the ignition key (3) and turn the key clockwise until it stops and rotate the fuel fill cap counterclockwise until it clicks. Lift off the fuel fill cap.

Do not overfill the tank. There should be no fuel in the filler neck (4).

After refueling, be sure to tighten the fuel fill cap firmly by turning it clockwise.

Make sure that the arrow marks (5) on the fuel fill cap and fuel tank is aligned.


Turn the key counterclockwise until it stops and remove the key.

Close the fuel tank lid.

⚠ WARNING

Petrol is highly flammable and explosive. You can be burned or seriously injured when handling fuel.

- Stop the engine and keep heat, sparks, and flame away.
- Refuel only outdoors.
- Wipe up spills immediately.

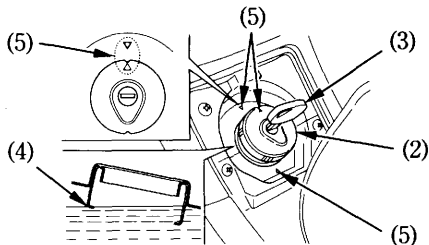

(2) Fuel fill cap

(3) Ignition key

(4) Filler neck

(5) Arrow marks