



5. Squeeze the rear brake lever (3).
The electric starter will only work when the rear brake lever is squeezed and the side stand is up.

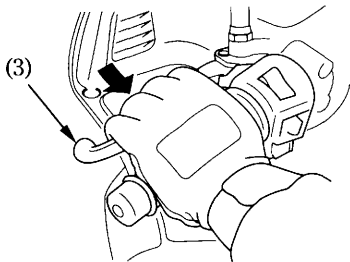

(3) Rear brake lever

6. With the throttle closed, push the starter button (4). Release the starter button as soon as the engine starts.

The engine will not start if the throttle is fully open (because the electronic control module cuts off the fuel supply).

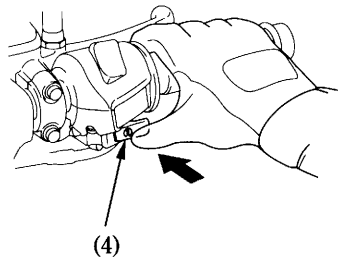

(4) Starter button