

## **BRAKE LOCK OPERATION**

Refer to the Safety Precautions on page 86 .


### Parking Brake Inspection:

1. Stop the engine and put the scooter on its center stand on level ground.
2. Count the number of clicks before the brake starts to take hold by slowly pulling in the lever from the fully returned position.

Parking brake lever free play is:

**3 – 6 clicks**

If adjustment is necessary, have the brake adjusted by your Honda dealer for this service.

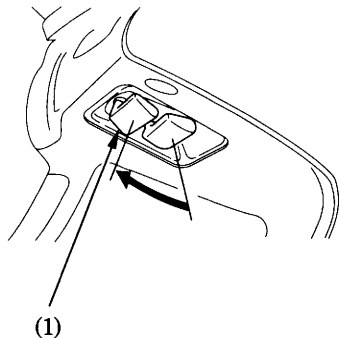

(1) Parking brake lever