

FUEL


Fuel Tank

The fuel tank is located under the step board.

The fuel tank capacity including the reserve supply is:

16.0 ℓ (4.23 US gal , 3.52 Imp gal)

Open the fuel tank lid (1).

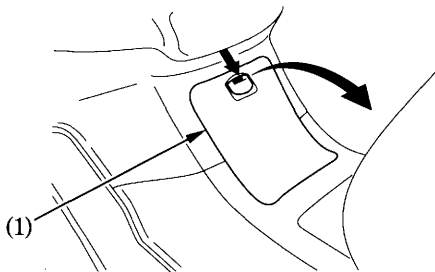

(1) Fuel tank lid