


1. Place the scooter on its center stand.
2. Lock the rear wheel by applying the parking brake lever (1).

## **⚠ CAUTION**

Contact with the spinning rear wheel can cause you to be hurt.

Set the parking brake when the scooter is on its center stand.

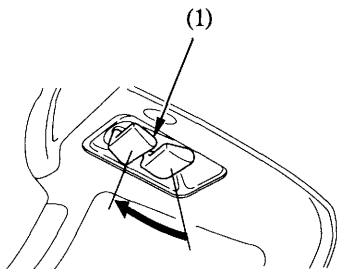

(1) Parking brake lever