
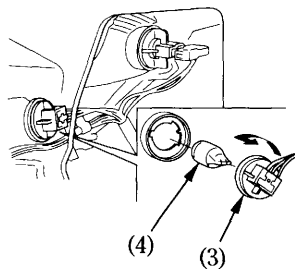


## Brake/Tail Light Bulb

1. Open the seat (page 56 ).
2. Remove the bulb maintenance lid (1) while pushing down the hooks (2).
3. Turn the socket (3) approximately 45° counterclockwise, then pull it out toward you.
4. Pull out the bulb (4) without turning.
5. Install a new bulb in the reverse order of removal.

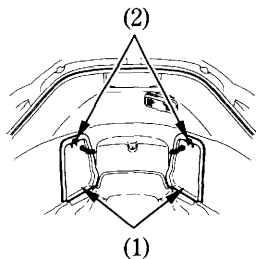

(1) Bulb maintenance lid  
(2) Hooks

(3) Socket  
(4) Bulb