


Warning and Indicator Lights

The warning and indicator lights are located between the instruments.

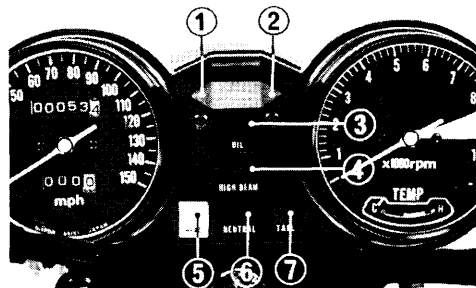

- 1 Left turn signal indicator light
- 2 Right turn signal indicator light
- 3 Oil pressure warning light
- 4 High beam indicator light
- 5 Headlight warning light
- 6 Neutral indicator light
- 7 Tail/stoplight warning light

● **Left turn signal indicator light (amber):**
Left light will flash when the left turn signal lights are operating.

● **Right turn signal indicator light (amber):**
Right light will flash when the right turn signal lights are operating.

● **High beam indicator light (blue):**
Light will be on when headlight is on high beam.

● **Neutral indicator light (green):**
Light will be on when the transmission is in neutral.