


Helmet Holder

The helmet holder 1 eliminates the need for carrying your helmet after parking. The holder can be locked to help prevent theft.

1. Unlock the holder with the ignition key 2.
2. Hang your helmet on the holder pin 3 and push the pin to lock. This automatically locks the helmet holder.

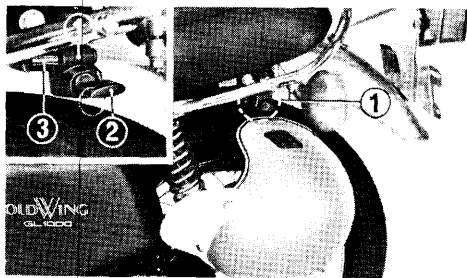

- 1) Helmet holder
- 2) Ignition key
- 3) Holder pin


Top and Side Compartments

To open the top compartment, insert the ignition key and turn it clockwise.

The tool compartment is located inside. Remove the tool compartment and turn the knobs 3 counterclockwise to open the left or right side compartment.

Tighten the knobs 3 securely when closing the side compartments.

The top compartment locks automatically when closed.

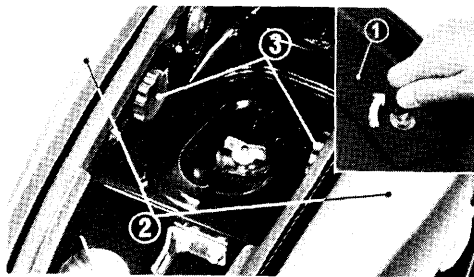

- 1) Top compartment cover
- 2) Side compartment covers
- 3) Knobs