

## Fuel Valve


The fuel valve 1 is mounted under the rear of the left access panel.

### "OFF" position:

When the fuel valve is turned to the "OFF" position, fuel cannot flow from the fuel tank to the carburetors. Set the valve in this position whenever the motorcycle is not in use.

### "ON" position:

When the fuel valve is turned to the

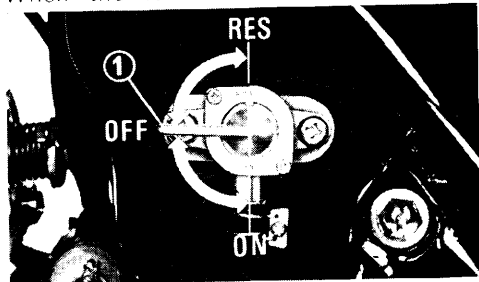

1 Fuel valve

"ON" position, fuel will flow from the main fuel supply to the carburetors. Set the valve in this position when the engine is to be operated from the main fuel supply.

### "RES" position:

When the fuel valve is turned to the "RES" position, fuel will flow from the reserve fuel supply to the carburetors. The fuel valve should be set in this position only after the needle of the fuel gauge indicates **E (empty)** and the main fuel supply has been consumed. The reserve fuel supply is approximately **0.8 U.S. gal. (3l)**.

Switching to the reserve fuel supply serves as a warning to the rider that it is time to refill the fuel tank.

---

**NOTE:** Do not operate the machine with the fuel valve in the reserve position after refueling, or you will defeat the purpose of the reserve fuel supply.

---