

STARTING THE ENGINE

NOTE: *The electric system of the GL1000 is designed to prevent electric starting if the transmission is in gear, unless the clutch is disengaged. However, it is recommended that the transmission be placed in neutral before attempting to start the engine.*


Cold Engine Starting Procedure

1. Turn the fuel valve to the "ON" position (page 22).
2. Insert the key into the ignition switch and turn to the "ON" position. At this time, observe the green neutral indicator light (page 12). The light will be on when the transmission is in the neutral position.

Also at this time the red oil pressure warning light should be on. If the light fails to come on, the connection should be checked for an open circuit and the bulb checked and replaced if it is burned

out.

3. Make sure that the engine stop switch (page 16) is in the "RUN" position.
4. Pull the choke knob out to the fully closed position (A).

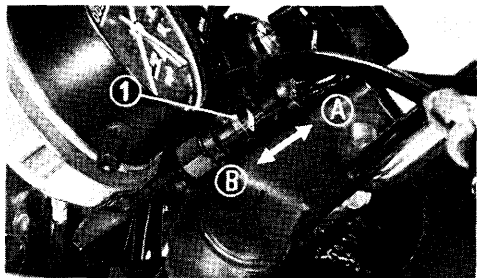

1 Choke knob