

MAINTENANCE OPERATIONS

Engine Oil

Engine oil level:

Check engine oil level at the start of each day the motorcycle is to be operated and when refueling. Place the motorcycle on the center stand and check the oil level through the inspection window ① located at the lower right side of the crankcase.

Oil level must be maintained between the upper ② and lower ③ oil level marks on the inspection window.


Replenish oil up to the upper level mark, when oil level falls near the lower level.

CAUTION:

- Check the oil level frequently.
 - If the oil is below the lower level mark on the inspection window, fill to the upper level mark before operating engine.
-

Oil and oil filter element change:

The engine oil is the chief factor affecting the performance and the service life of the engine. Therefore, the oil recommended on page 24 should be used and the oil should always be maintained at the proper level. Further, the oil should be changed and the oil filter element replaced at the maintenance intervals shown

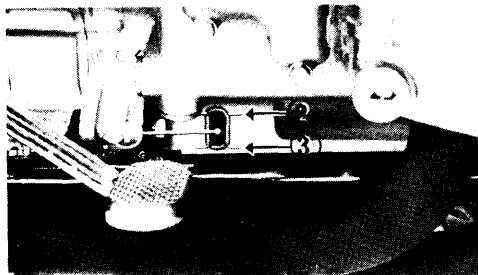

- ① Inspection window ③ Lower level mark
② Upper level mark