


on page 38. Perform the engine oil change in the following manner.

Drain the oil while the engine is still warm to assure complete and rapid draining.


1. Remove the oil filler cap ④.
2. Place an empty oil drain pan under the crankcase to catch the oil, and then remove the oil drain plug ⑤ with a 17 mm wrench.

Also remove the oil filter bolt ⑥ and the filter element.

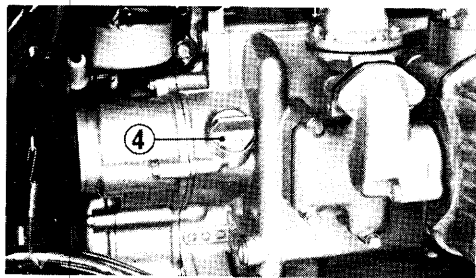

④ Filler cap

3. After the oil stops draining from the crankcase, operate the kick starter several times to drain any oil which may be left in the recesses of the engine.
4. When the oil has been completely drained, reinstall the drain plug ⑤ securely, making sure that the plain washer used on the drain plug is in good condition.

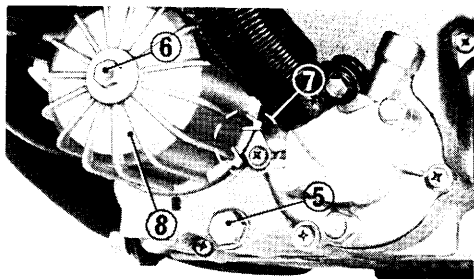

⑤ Oil drain plug
⑥ Oil filter bolt

⑦ Alignment marks
⑧ Filter cover