


## Final Drive Gear Oil

### Oil level:


Place the motorcycle on the center stand in a level position and check the level by removing the oil filler cap ①. Oil level must be maintained up to the filler neck ②.

If it is below the filler neck, fill to the neck.

***CAUTION: Take care not to allow foreign materials to enter the final drive gear case.***

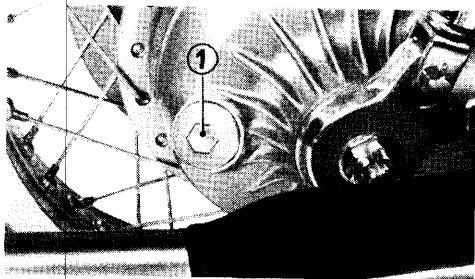

①: Oil filler cap

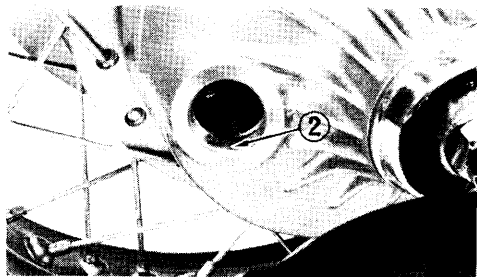

②: Filler neck