

Fuel Filter Maintenance

The fuel filter is located at the front of the fuel tank. Accumulation of dirt in the filter will restrict the flow of fuel; therefore, the fuel filter should be replaced periodically by your authorized Honda dealer.


Clutch Adjustment

The clutch should be adjusted so that pulling in the clutch lever will completely disengage the transmission from the engine. If the clutch does not completely disengage, the engine will stall when shifting into gear or else the motorcycle will have a tendency to creep.

However, if the clutch does not fully engage, the clutch will slip causing rapid wear and the motorcycle will not accelerate in response to the acceleration of the engine. In order for the full engine output to be delivered to the rear wheel,

it is necessary to have the clutch properly adjusted.

The normal clutch lever free play is **0.4-0.8 in. (10-20 mm)** measured at lever end before the clutch starts to disengage.

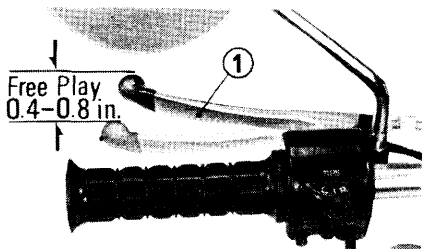

1 Clutch lever