



To adjust, perform the following steps.

1. Loosen the lock nut 3 and screw the clutch cable adjusting bolt 2, located at the clutch lever, all the way into A the clutch lever bracket.
2. Loosen the lock nut 4 and turn the clutch cable adjusting bolt 6, located at the clutch housing, in the direction B to loosen the clutch cable.

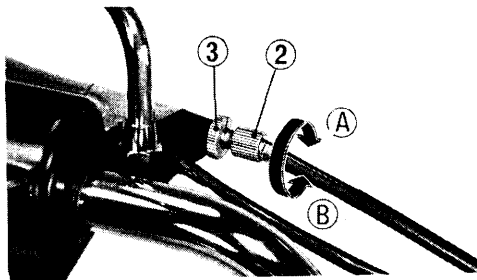

2 Clutch cable adjusting bolt  
3 Lock nut

3. Remove the clutch cover. Loosen the clutch lifter adjusting screw lock nut 5 turn the clutch adjusting screw 4 in the clockwise direction C until a slight resistance is felt. From this position, turn the adjusting screw 4 in the counter-clockwise direction D 3/4 turn. Tighten the lock nut 5.

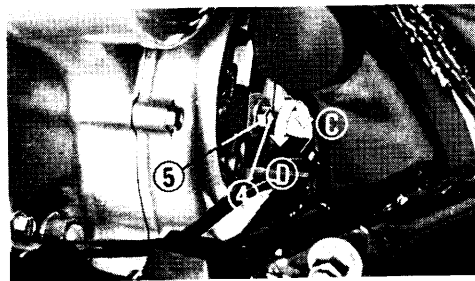

4 Clutch adjusting screw  
5 Adjusting screw lock nut