

DOWN WHILE ROTATING CAP. Wait until the pressure is relieved before removing cap. Cap may now be removed by pressing down and rotating counterclockwise.


Top-up the radiator with coolant, refit the cap tightly and fill the reserve tank so that the level is at the FULL mark when the engine is at normal operating temperature.

The cooling system should be serviced as follows:

1. Wash radiator cap and filler neck with clean water.
2. Check freezing protection level of coolant.
3. Test pressure holding capacity of radiator cap and cooling system. Replace cap or repair leaks as necessary.
4. Inspect all hoses and replace as necessary. Tighten all hose clamps.
5. Clean front of radiator.

CAUTION:

- *A radiator pressure cap of the proper type must be used. Always install it tightly and have its operation checked periodically by your Honda Dealer. When replacement is necessary your Honda Dealer can advise you.*
 - *The cooling system thermostat does not need to be changed for summer or winter operation.*
-

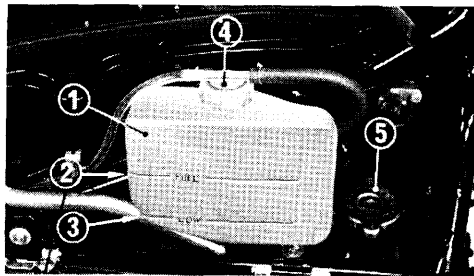

- | | |
|----------------|--------------------|
| 1 Reserve tank | ④ Reserve tank cap |
| ② "FULL" mark | ⑤ Radiator cap |
| ③ "LOW" mark | |