

FEATURES (Not required for operation)

FAIRING POCKETS

The left fairing pocket can be used by unsnapping the cover. To remove the right pocket lid, insert the ignition key, turn it clockwise and open the lid.

To attach the right pocket lid, slide the prong at the front of the lid into the slot in the fairing pocket, then push the other end of the lid down until it locks.

⚠ WARNING

- ***Fairing pockets are for lightweight items. Do not carry more than 2 kg (5 lbs) in each side. Excessive weight may adversely affect vehicle handling and control.***
- ***Load weight equally in both sides to avoid an imbalance that may result in a loss of vehicle control.***
- ***Review Loading and Accessories before loading (page 6).***

