


## ESSENTIAL INDIVIDUAL COMPONENTS

### IGNITION SWITCH

The ignition switch (1) is located under the right side of fuel tank.

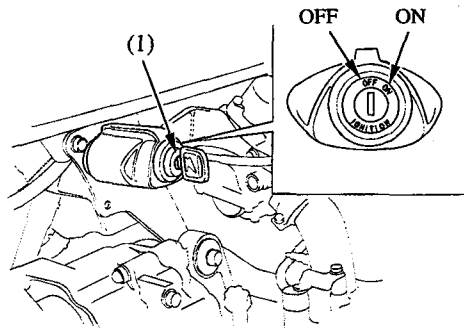

(1) Ignition switch

| Key Position | Function  | Key Removal           |
|--------------|---|-----------------------|
| OFF          | Engine and lights cannot be operated.   | Key can be removed    |
| ON           | Headlight, taillight and instrument lights are on and other lights can be operated.<br>Engine can be started. | Key cannot be removed |