

- Tighten and torque the nuts and bolts to the specification listed:

Axle nut torque:

110 N·m (11.2 kgf·m , 81 lbf·ft)

Passenger footpeg bracket bolt torque:

39 N·m (4.0 kgf·m , 29 lbf·ft)

Exhaust pipe joint nut torque:

10 N·m (1.0 kgf·m , 7 lbf·ft)

Bumper mount bolt torque:

27 N·m (2.8 kgf·m , 20 lbf·ft)

Footpeg mount bolt torque:

27 N·m (2.8 kgf·m , 20 lbf·ft)

Shift pedal mount bolt torque:

12 N·m (1.2 kgf·m , 9 lbf·ft)

- After installing the wheel, apply the brake several times and then check if the wheel rotates freely. Recheck the wheel if the brake drags or if the wheel does not rotate freely.